

CUADRO DE APLICACIÓN DE LOS ADAPTADORES RECOMENDADOS PARA RASPADORES, CEPILLOS Y CUCHILLAS GIRATORIAS EN LOS DISTINTOS CABEZALES

ÚTILES Referencias	CABEZAL Pinza 6 mm. y madril 8 mm.	CABEZAL Pinza 8 mm. y madril 8 mm.	ENCHUFES RÁPIDOS Hexagonales QCC y S1045
S 30x15	6-57	8-57	NV11 3/8x24
S 50x25	6-65, 6-57	8-57	NV11 3/8x24L
S 65x13	6-65, 6-57, AH 0021	8-57	NV11 3/8x24
S 76x32	6-M 14	8-M 14	NV11 M14
C 50x3.5	6-57	8-57	NV11 3/8x24
C 50x5	6-57	8-57	NV11 3/8x24
C 50x10	6-65, 6-57	8-57	NV11 3/8x24
C 50x13	6-65, 6-57	8-57	NV11 3/8x24L
C 50x19	6-65	-	NV11 3/8x24L
K 19x50	6-57	8-57	NV11 3/8x24
K 25x50	6-57	8-57	NV11 3/8x24
K 25x102	6-57	8-57	NV11 3/8x24
T 102x19	6-M14	8-M14	NV11 M14
TP 50x13	6-57, 6-65	8-57	NV11 3/8x24L
TP 50x19	6-65	-	NV11 3/8x24L
TP 76x16	6-65	-	NV11 3/8x24L
TP 102x19	6-M14	8-M14	NV11 M-14
RH102 a RH111	6-57, S1048	8-57	NV11 3/8x24
RH118 a RH122	AH-0001	-	-
RH152	S1049	-	S1047
RH156	AH-0001	-	NV11 R5
RH300 a RH306	S1048	-	S1046
RH308 a RH314	S1049	-	S1047XL
RH505 a RH553	S1048	8-57	S1046
RG0	6-57	8-57	NV11 3/8x24
RG1	350-3, 6-57	8-57	NV11 3/8x24
RG2	350-3, 6-57	8-57	NV11 3/8x24
R 5	AH 0001	-	NV11 R5
R 6	AH 0001	-	NV11 R6
AA 0803	AH 0001	-	NV11 R5**
AA 0903	AH 0001	-	NV11 R5
AA 0503	AH 0001	-	NV11 R5
TY	6-57	8-57	NV11 3/8x24
S890	6-65, 6-57, AH0021	8-57	NV11 3/8x24
S891	6-65, 6-57, AH0021	8-57	NV11 3/8x24
S892	6-65, 6-57, AH0021	8-57	NV11 3/8x24
S893	6-57	8-57	NV11 3/8x24
A 367 a A370	350-4	-	545-2



Los adaptadores marcados en rojo solo valen para el enchufe rápido S1045.